




1 - Carefully remove the injector with the preloaded IOL from the packaging

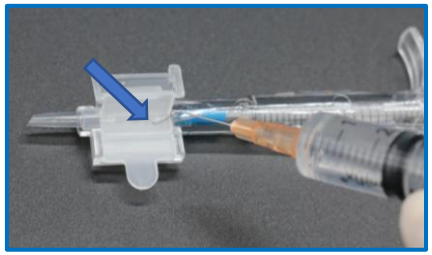

2 - Inject a few drops of **BSS** into the port located on the protective cover as shown

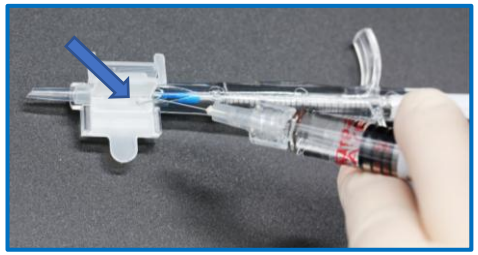

3 - Following the BSS, inject a few drops of **viscoelastic** into the same port

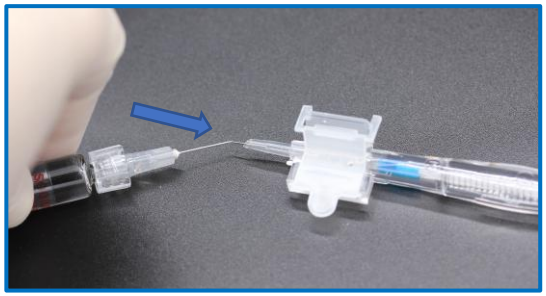

4 - Fill the loading chamber and nozzle with additional viscoelastic



5 - **Fold** the wings of the injector together



6 - While folding, the **protective cover will pop off**

Continued →



7 - Fold the wings completely together until you **hear two clicks**



8 - **Hold the wings together** while pushing the plunger **until the lens is in the nozzle**




9 - The IOL is now ready for implantation

an-vision GmbH
Hennigsdorf, Germany
+49 (0)3302-209 5550
info@an-vision.eu

an-vision Inc.
Salt Lake City, UT, USA
801-561-5040
info@an-vision.com

Preparing the an-PLD Injection System for Implantation

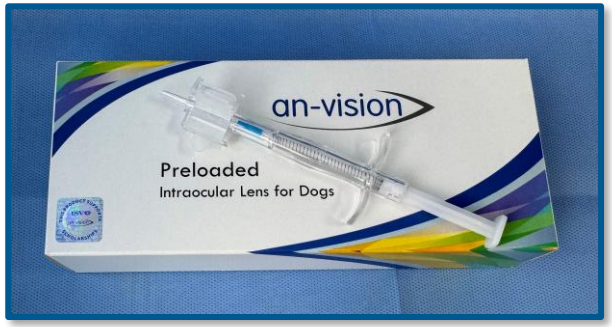

Supplies Needed:

- *0.5ml BSS in syringe with blunt canula*
- *Viscoelastic with blunt canula*

Scan the QR code to see video demo